

TWO LINE CLAMP ASSEMBLY INSTRUCTIONS


900569 (05/22)



INDUSTRIAL MAGNETICS

MAG-MATE®

INDUSTRIAL MAGNETICS, INC. • 231.582.3100 • WWW.MAGNETICS.COM

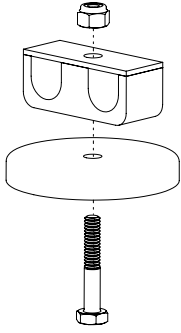

TWO LINE CLAMP ASSEMBLY INSTRUCTIONS


900569 (05/22)



INDUSTRIAL MAGNETICS

MAG-MATE®

INDUSTRIAL MAGNETICS, INC. • 231.582.3100 • WWW.MAGNETICS.COM

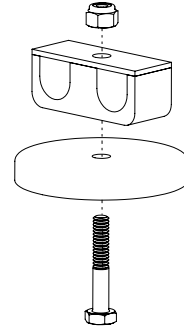

TWO LINE CLAMP ASSEMBLY INSTRUCTIONS


900569 (05/22)



INDUSTRIAL MAGNETICS

MAG-MATE®

INDUSTRIAL MAGNETICS, INC. • 231.582.3100 • WWW.MAGNETICS.COM

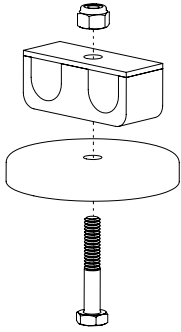

TWO LINE CLAMP ASSEMBLY INSTRUCTIONS


900569 (05/22)



INDUSTRIAL MAGNETICS

MAG-MATE®

INDUSTRIAL MAGNETICS, INC. • 231.582.3100 • WWW.MAGNETICS.COM

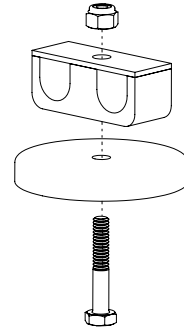

TWO LINE CLAMP ASSEMBLY INSTRUCTIONS


900569 (05/22)



INDUSTRIAL MAGNETICS

MAG-MATE®

INDUSTRIAL MAGNETICS, INC. • 231.582.3100 • WWW.MAGNETICS.COM

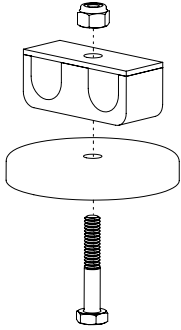

TWO LINE CLAMP ASSEMBLY INSTRUCTIONS


900569 (05/22)



INDUSTRIAL MAGNETICS

MAG-MATE®

INDUSTRIAL MAGNETICS, INC. • 231.582.3100 • WWW.MAGNETICS.COM

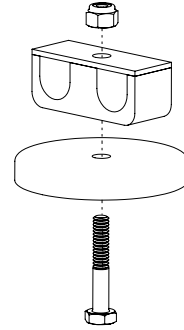

TWO LINE CLAMP ASSEMBLY INSTRUCTIONS


900569 (05/22)



INDUSTRIAL MAGNETICS

MAG-MATE®

INDUSTRIAL MAGNETICS, INC. • 231.582.3100 • WWW.MAGNETICS.COM

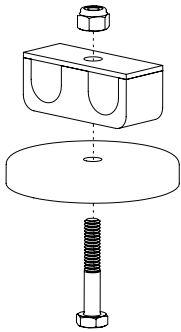

TWO LINE CLAMP ASSEMBLY INSTRUCTIONS

900569 (05/22)



INDUSTRIAL MAGNETICS

MAG-MATE®

INDUSTRIAL MAGNETICS, INC. • 231.582.3100 • WWW.MAGNETICS.COM

