



INSTALLATION MANUAL

Inline Separator Magnet

TRAMP METAL GROUP Toll Free: 888.582.00821

P.O. #: Order #:

Part #:

Sold to:

Ship to:

Installation

Inline Separator Magnets can be easily installed with compression couplings. Standard magnets are built with plain tube or pipe ends. Cam locks and ANSI Flanges can be provided upon request. Inline Separator Magnets are supported from the ends by the connections to the pneumatic lines.

Cleaning Procedure

To Clean the Inline Separator Magnets

1. Unlatch the door clamps and remove or open the door.
2. Wipe off the magnetic surface with a shop rag or gloved hand to remove any tramp metal particles.
3. Inspect gasket for excessive wear.
4. Set the door back on the housing and latch the clamps closed to reseal the Inline Separator Magnets for operation.

Maintenance

- Inspect Gasket Material for wear and check to make sure that the gasket isn't pulling away from the housing when the door is opened or removed.
- Replace Gasket Material whenever wear is excessive or the Inline Separator Magnets starts leaking. Call IMI for recommended Gasket Material (1-888-582-0821 or 1-231-582-3100).

Comments or Concerns?

We believe Industrial Magnetics, Inc. offers the finest Inline Separator Magnets available today. Great pride has gone into the design and manufacture of this unit. Any comments or concerns should be directed to our Customer Service Department at 1-888-582-0821.

We appreciate the opportunity of serving you!

©2004 **INDUSTRIAL MAGNETICS, INC.**

1240 M-75 South • P.O. Box 80 • Boyne City, Michigan 49712-0080 • Phone: (231) 582-3100

Fax: (231) 582-2704 • Web: www.magnetics.com • E-mail: imi@magnetics.com

AUTOMATION 888-582-0823

MAG-MATE 888-582-0822

TRAMP METAL 888-582-0821