

# Clean Sweep

(Self-Cleaning)

## Assembly Instructions

### Attaching the handle to magnetic sweeper:


Slide open-end of **Handle** over the **Handle Tab**. Line up the hole in the handle and the handle tab. Place a bolt with a washer on it through the hole and secure from the back with a washer and lock nut. Tighten bolt firmly using two wrenches.

### Attaching release mechanism to the handle:

1. Place a bolt with a washer on it through the hole near the end of the **Release Lever**. Slide the remaining portion of the bolt through the hole near the top of the handle, sandwiching a washer between the release lever and the handle. Secure these parts with a washer and lock nut using two wrenches.

2. Insert a bolt with a washer on it through the hole near the grip on the **Release Lever**. Next slide a washer and then the hole in the end of the **Release Bar** over the end of the bolt. Secure the release lever to the release bar with another washer and a lock nut.

3. Bolt the opposite end of the release bar to the **Eye-bolt** located on the front of the magnet. Be sure to sandwich a washer between the eye-bolt and the release bar. Secure with a washer and lock nut using two wrenches to tighten the nuts and bolts.

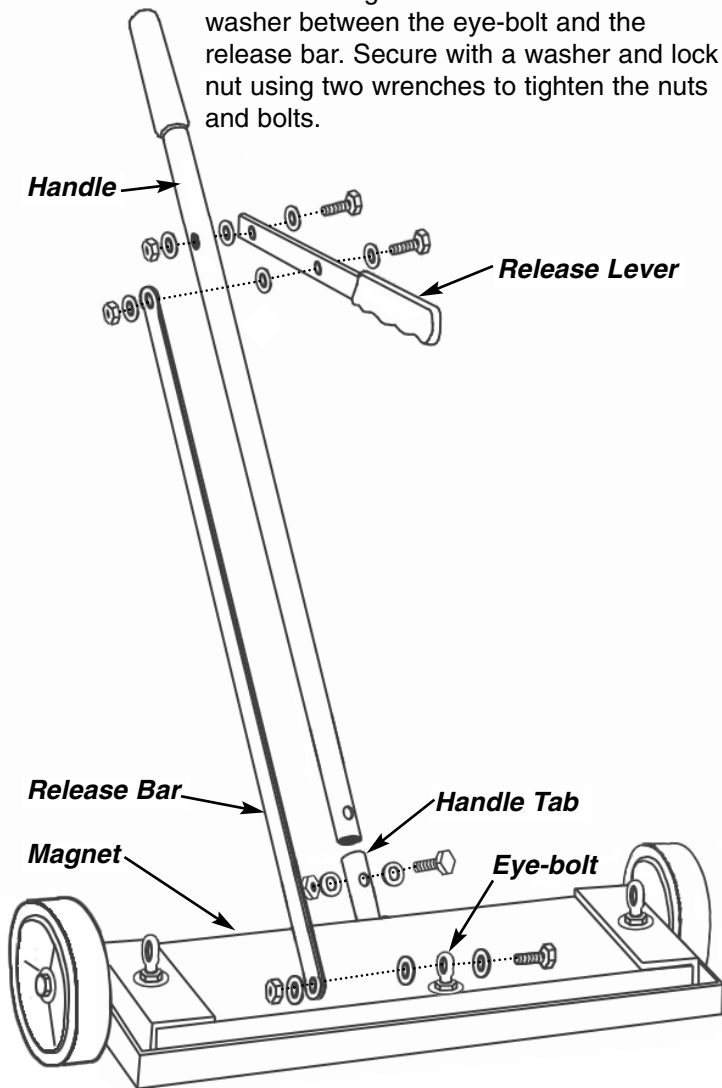

# Clean Sweep

(Self-Cleaning)

## Assembly Instructions

### Attaching the handle to magnetic sweeper:

Slide open-end of **Handle** over the **Handle Tab**. Line up the hole in the handle and the handle tab. Place a bolt with a washer on it through the hole and secure from the back with a washer and lock nut. Tighten bolt firmly using two wrenches.

### Attaching release mechanism to the handle:

1. Place a bolt with a washer on it through the hole near the end of the **Release Lever**. Slide the remaining portion of the bolt through the hole near the top of the handle, sandwiching a washer between the release lever and the handle. Secure these parts with a washer and lock nut using two wrenches.

2. Insert a bolt with a washer on it through the hole near the grip on the **Release Lever**. Next slide a washer and then the hole in the end of the **Release Bar** over the end of the bolt. Secure the release lever to the release bar with another washer and a lock nut.

3. Bolt the opposite end of the release bar to the **Eye-bolt** located on the front of the magnet. Be sure to sandwich a washer between the eye-bolt and the release bar. Secure with a washer and lock nut using two wrenches to tighten the nuts and bolts.

